


Anti-Static String Installation


IOLINE™
14140 NE 200th St.
Woodinville, WA. 98072
(425) 398-8282

1 Locating the holes

Locate the holes on the right and left stand leg.

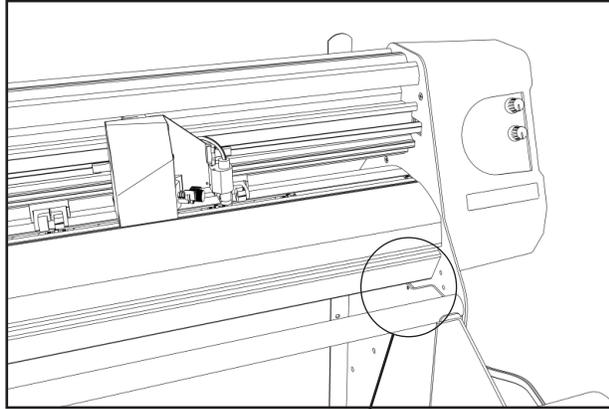


The holes are located on the stand just under the body of the plotter.

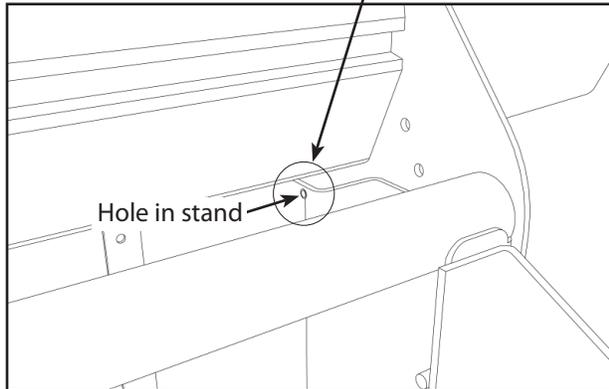


2 Installing the String


Thread the string through the hole.

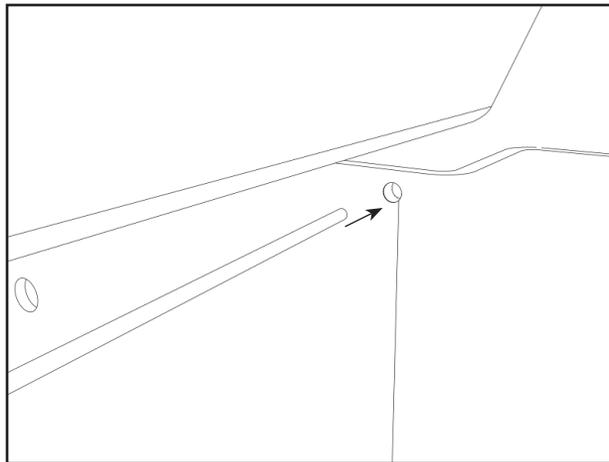


Pull the string through the other side and from under the end plate.

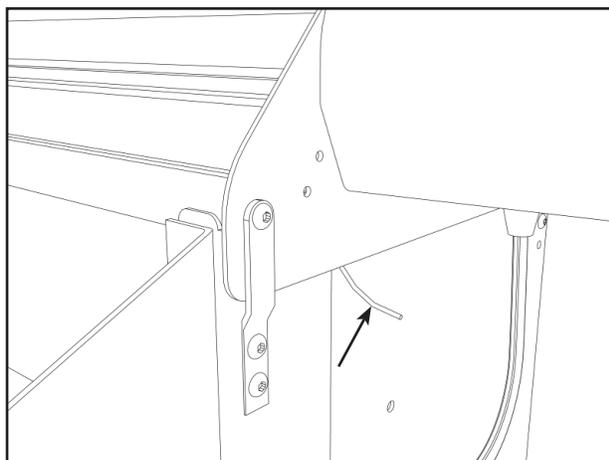


Tie a knot in the end of the anti-static string

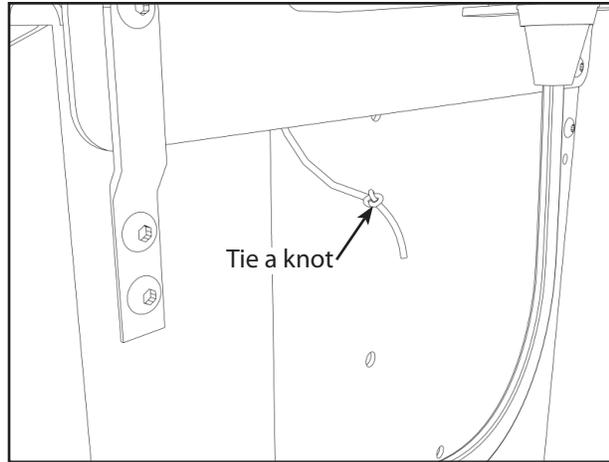

Repeat the process on the other side of the machine and let the string droop.

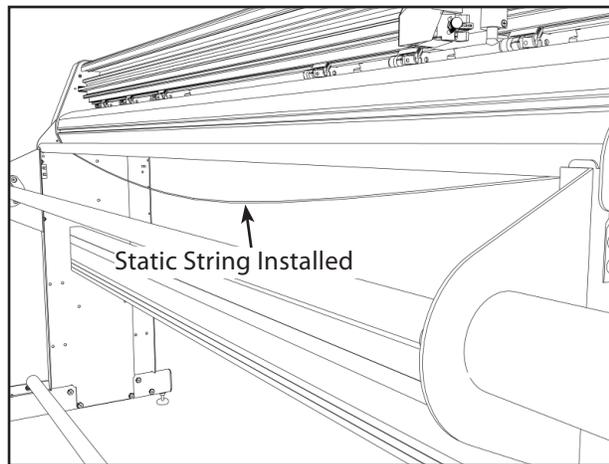

Install the second string in the same way as the first.

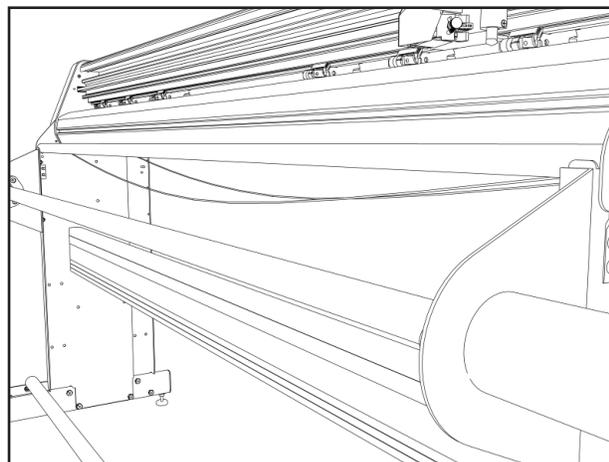

If problems arise contact Ioline Tech Support.