



The following procedure pertains to the "Blue Logic Board" for the Signature 5000.

Sometimes, clearing the memory of the Signature 5000 will solve many problems totally unrelated to the memory. The following procedure will reset the plotter to factory defaults and will dump anything that might be causing the plotter to act differently than expected.

1. Move the carriage to the left end plate.
2. Turn plotter off.
3. Remove the 4 screws in the front and underneath the plotter.
4. The unit is hinged at the back, so tilt it open.
5. On the main logic board, locate JP2, which is marked clr/run.
6. Jumper the left and middle posts together.
7. Turn machine on.
8. Watch the carriage move to the right. Turn the machine off when the carriage reaches the right end plate.
9. Remove the jumper from JP2.

The memory of the plotter is now reset to factory defaults.