

The following procedure pertains to the "Blue Logic Board" for the Summit with ROM version 3.00 or later installed.

Sometimes unusual plotter symptoms and its accompanying grief can be remedied by clearing the main logic board's memory, even though the problem is completely unrelated to the memory. This procedure resets the plotter to factory defaults and dumps anything that might be causing the plotter to act differently than expected.

1. Turn off power and remove power and data cables from Summit.
2. Manually move the carriage to left endplate.
3. Hold in the "Pause" key while turning on the plotter.
4. Once the carriage starts moving to the right, release the "Pause" key.
5. When the carriage reaches the right side of the plotter and the "Pause" light is illuminated, this procedure is complete.

The plotter is now set to factory defaults.